

## KRAIBURG VITA

### prerequisites:




#### concrete:

- min. 10 cm thick
- no holes
- no elevations

#### mats:


even temperature:  
min. 5° C to max. 30° C  
(store according to initial temperature)

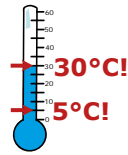


for animal well-being some litter is necessary to absorb moisture (e.g. soft milled straw or mineral material)

### You will need this:


#### measuring:

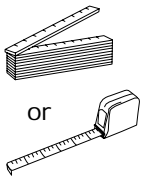


#### marking:



#### cutting:

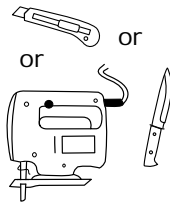

#### drilling and installing:

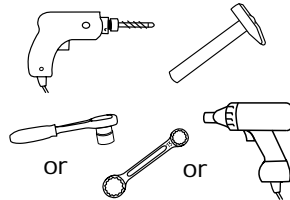

#### KRAIBURG fastening elements:




framing plugs  $\varnothing$  10 x 100 mm with

- hexagon screw (SW 13) - A2
- washer  $\varnothing$  30 mm - A2


spax screw  $\varnothing$  5 x 60 mm

(fastening elements are part of delivery)

### 1 Lay out VITA Border (frame profiles)

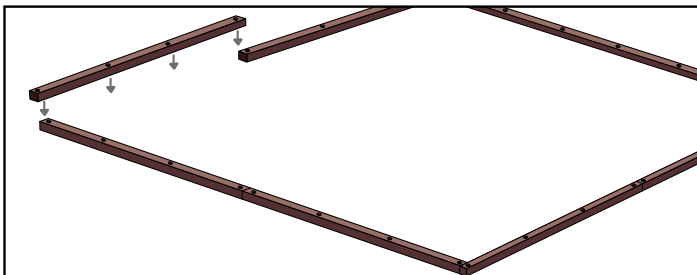

adapt frame profiles to the area to be covered

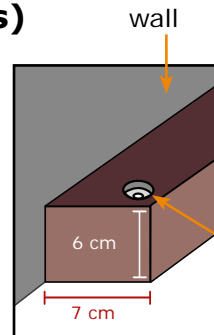


#### IMPORTANT:

if the frame profile is cut off, set additional drill hole and counterbore!


drill hole at the inner edge

### 2 Fasten VITA Border (frame profiles) through pre-drilled holes


> framing plugs 10 x 100 mm

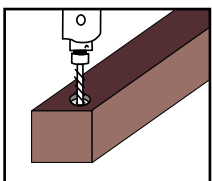

drill through pilot hole

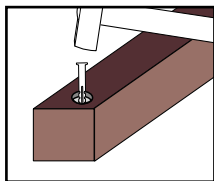

pound the plastic plugs in flush

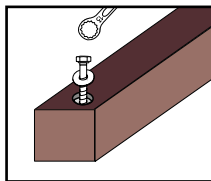

fasten screws and washers




fasten screws until they are seated evenly fast.

**Do not overtighten!**

### 3 Fit VITA Cup (lower mats) into the assembled frame

open cups on upper side

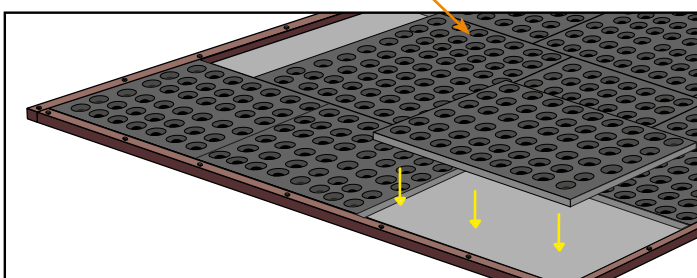


Fill in complete area seamlessly with lower mats, if necessary, cut the mats to fit



lower mats can be adjoined cross- and/or lengthwise





#### ④ Lay out KRAI-PUR (foam) completely onto lower mats

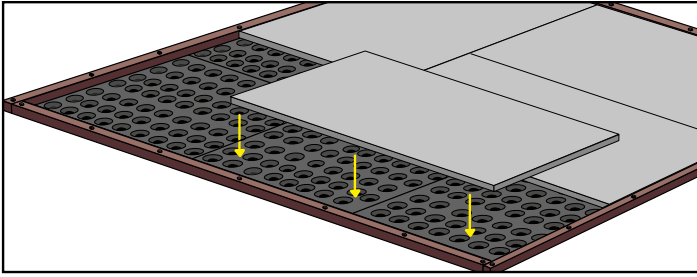


adjoin foam mats seamlessly, if necessary, cut to fit

**i** foam can be adjoined cross- and/or lengthwise

#### ⑤ Roll out and position VITA LongLine (top covering)

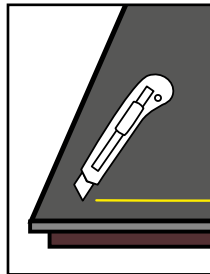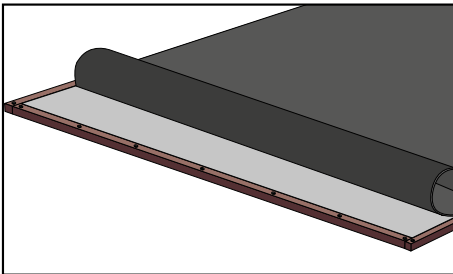


cut off overlaying mat parts at the edges

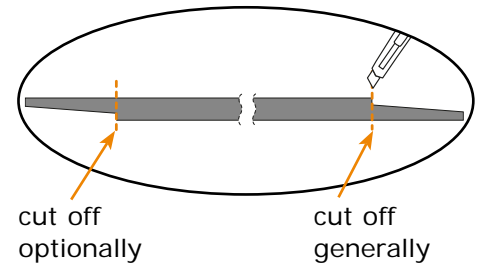


#### ⑥ Fasten VITA LongLine (top covering) with VITA Top (covering strip)

**A** lay covering strips onto the top covering along the walls

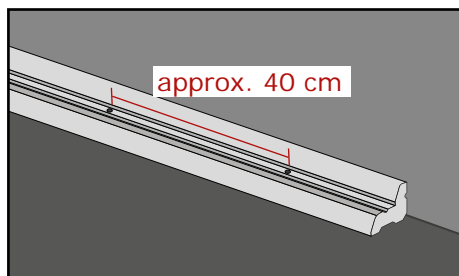

- high end outwards
- flush to wall

**B** fasten approx. every 40 cm  
> **spax screw 5 x 60 mm**

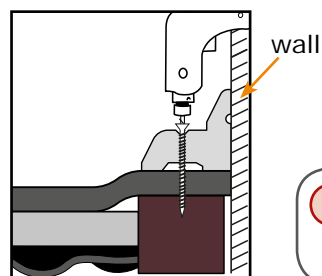

**!** fasten screws until they are seated evenly fast.  
**Do not overtighten!**